

# Jukebox-hire.co.uk

 
24 hour Jukebox hire, for all occasions



## Operating Instructions

FOR SUPPORT CALL  
07860 516 973

# WURLITZER®

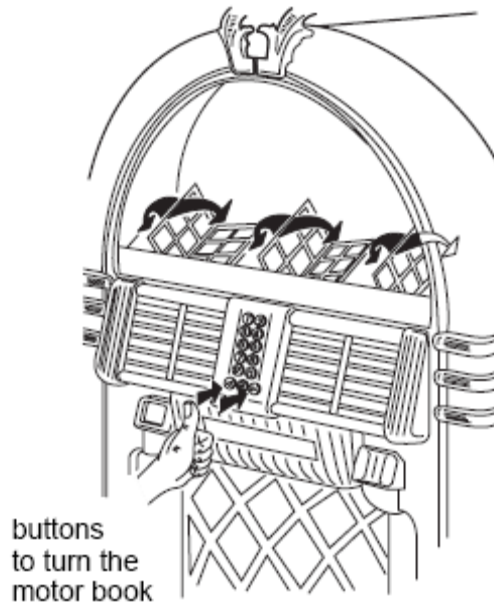


## Track selection

### How to select a track

If credit exists or free play is set you can select tracks by means of the buttons 0 - 9 on the keyboard. First enter the number of the CD with two digits, then the track with two digits too. Example: CD 2, track 9: Enter 0 - 2 - 0 - 9 (Exception: CD 100 = 00.)

### The button R

 You can delete wrongly entered numbers up to the third digit by means of the button R (Reset). But after having entered the fourth digit the jukebox stores and executes a selection. By pressing the button R the available credit will be displayed for a few seconds.

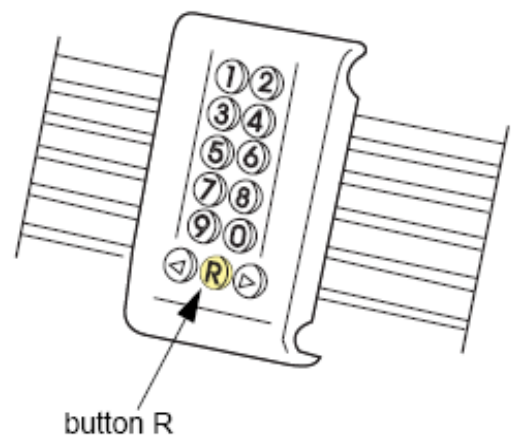

### The display flashes

After entering the fourth digit of a selection the jukebox starts to search and play the selected CD immediately. If the display flashes the entered selection was not valid. Check:



- if credit is available or
- if the selection is higher than the programmed number of CDs in the carrier

If you select a higher track number than available on a CD the jukebox overcounts the tracks and starts at the beginning.

 
Example: CD 03 contains 17 tracks. But selected track is 0 - 3 - 1 - 9. The jukebox plays track 17 on CD 03.

### The Jukebox Memory 6 Song Rule

We have programmed the jukebox to only allow up to 6 songs to be pre-programmed into its memory at any one time. This restriction is in place to stop younger guests “hogging” the music and selecting songs you would not want to hear all night.

### I do not like this track - the button CANCEL


If you do not like a track you can cancel it by pressing the button 'CANCEL' at the rear side of the jukebox or at the remote control. The jukebox stops playing or plays the next track if a selection has already been made.

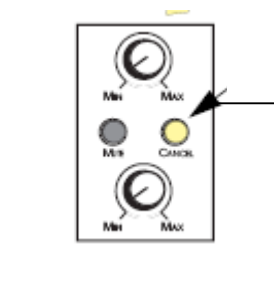

The Cancel Button is located on the rear of the Jukebox  
You may have to cancel up to 5 times to clear all selections

### Setting the Jukebox Internal Volume (Without Accessory Pack)

 Locate the volume buttons on the rear of the Jukebox and turn as desired

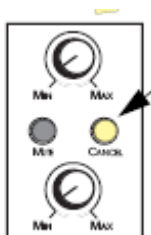

The volume of the jukeboxes own internal speakers and external speakers (when hired) are independently controlled. Turn the volume buttons to the desired volume, always avoid setting to max.

## Using the Optional Accessory Pack

The Jukebox music and iPod music is played through a pair of external 300w booster speakers. Dock your own iPod into the iPod cradle (iPod not supplied). The dock will charge your iPod and also automatically set it to the correct input volume level. Select the playlist / song from your iPod as normal and pressing play on the iPod wheel.

To switch between the Jukebox music and your own iPod music at any time during the evening simply move the channel sliders up or down on the audio mixer setting each device to the desired volume level.

